

WMC80 Blades

HOW TO REPLACE BLADES
REEMPLACEMENT DES LAMES
CÓMO CAMBIAR LAS CUCHILLAS
AUSTAUSCHEN DER KLINGEN
SOSTITUZIONE DELLE LAME

- You can check a video about how to replace blades from the link below.
- Vous pouvez consulter la vidéo sur le remplacement des lames en cliquant sur le lien ci-dessous.
- Puede consultar el vídeo sobre cómo sustituir las cuchillas en el siguiente enlace.
- Über den unten stehenden Link können Sie sich ein Video zum Auswechseln der Messer ansehen.
- Un video sulla sostituzione delle lame è disponibile al seguente link.

<https://play.dooonut.jp/ct3b0tfo2c7c7136bvs-g?sid=2&oid=574>



If your language is not English, please read the OPERATING AND MAINTENANCE MANUAL enclosed with the machine.

Si votre langue est pas l'anglais, s'il vous plaît lire la MANUEL D'UTILISATION ET D'ENTRETIEN joint à la machine.

Si su idioma no es el Inglés, por favor lea la MANUAL DE OPERACIONES Y MANTENIMIENTO cerrado con la máquina.

Wenn Ihre Muttersprache nicht Englisch, lesen Sie bitte die BETRIEBSANLEITUNG mit der Maschine bei.

Se la lingua non è l'inglese, si prega di leggere la MANUALE DI FUNZIONAMENTO E MANUTENZIONE allegato alla macchina.




CAUTION

- Wear safety gloves.
- Work on a stable work platform.



1. How to remove the blades

- Refer to the illustrations below.

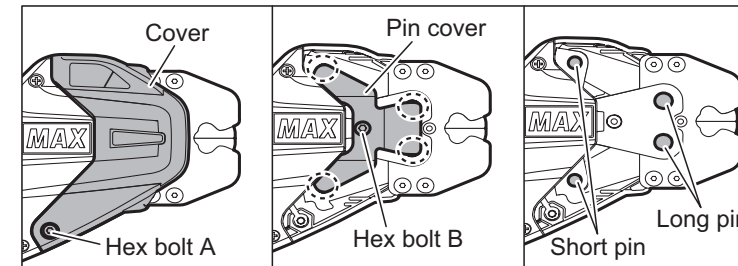


- ① Set to the blade replacement mode.

- ①-a, To enter blade replacement mode, insert the battery pack and unlock the trigger.

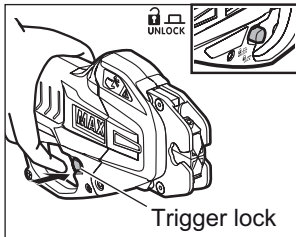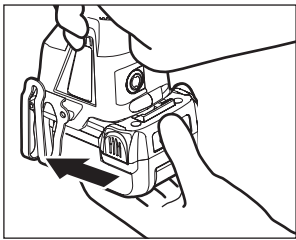


- ①-b, Pull the trigger once to start up.


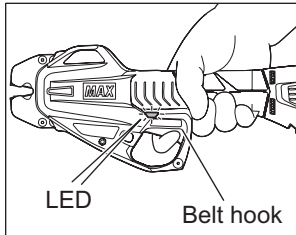


- ①-c, While pressing the operation button, pull the trigger.

The blades will slowly move to close, and they will remain closed even if you remove your finger from the trigger.

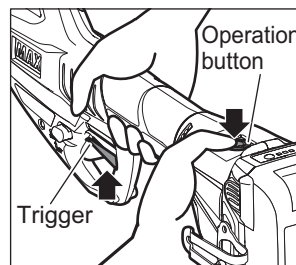

- ② In blade replacement mode (with the blades closed), lock the trigger and remove the battery pack.

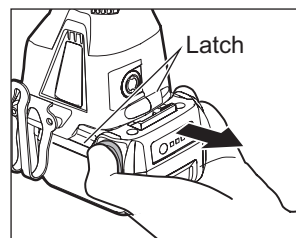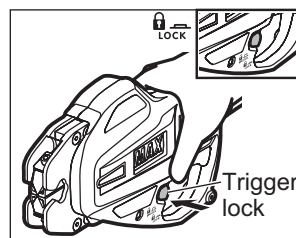

WARNING


- When replacing the blades, be sure to place the trigger lock to the locked position and remove the battery pack from the main unit.
- If the cover is opened with the blades open, be sure to close the cover and enter blade replacement mode.




CAUTION

- Do not operate the machine with the cover removed.
- Wear safety gloves.
- Work on a stable work platform.


- ③ Loosen hex bolt A with the hex wrench provided and remove the bolt.

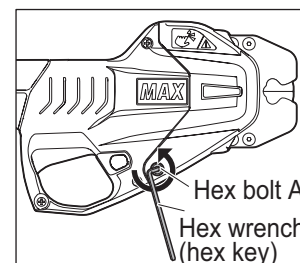


- ④ Slide the cover in the arrow direction, then remove the cover.

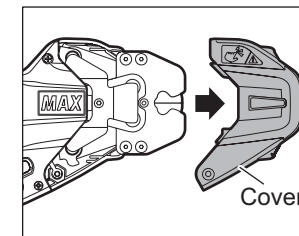


- ⑤ Loosen hex bolt B and remove the bolt.

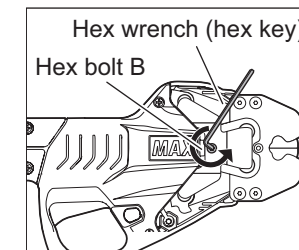


- ⑥ Remove the pin cover.

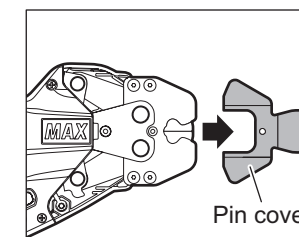


- ⑦ Remove the two long pins.

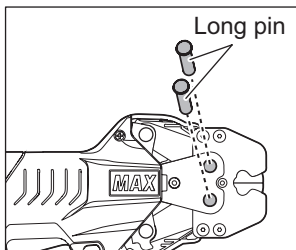

- ⑧ Remove the two short pins.

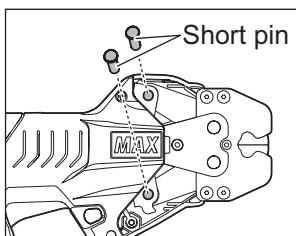


- ⑨ Remove the blades.

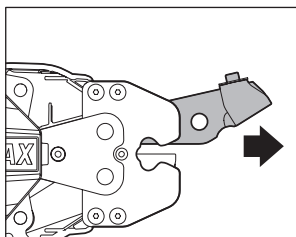

2. How to attach the blades


① Apply the grease supplied with the replacement blades at 12 locations (3 locations × front and rear × 2 blades).

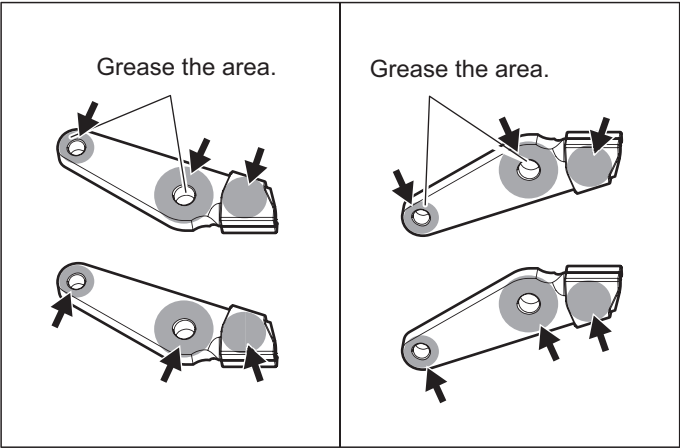


CAUTION

• If grease is not applied, the tool's functions may be inhibited.


② Insert the blades and align the blade holes to feed the long pins.

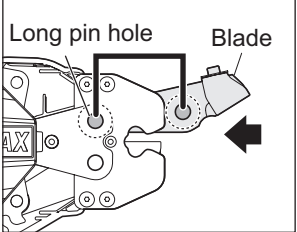


③ Apply the grease supplied with the replacement blades to the entire circumference of the long pin shafts.

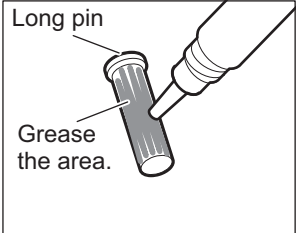


④ Insert the hex wrench (hex key) provided into the long pin hole and move it in a circular motion to align the internal parts.

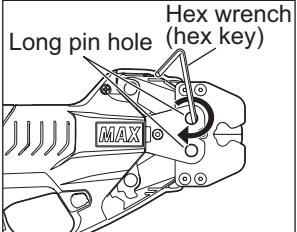


⑤ Insert the two long pins.

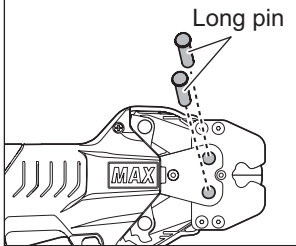


⑥ Align the blade holes for inserting the links and short pins.

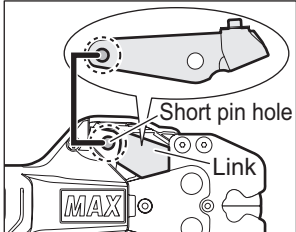


⑦ Apply the blade grease supplied with the replacement blades to the entire circumference of the short pin shafts.

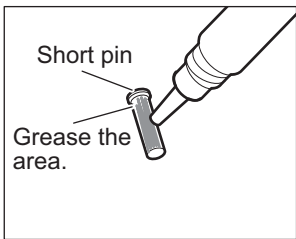


⑧ Insert the two short pins.

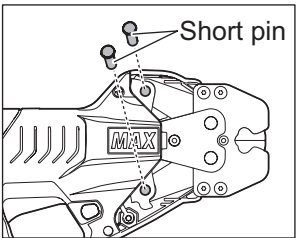


⑨ After confirming that the long pins and short pins have been inserted, attach the pin cover.

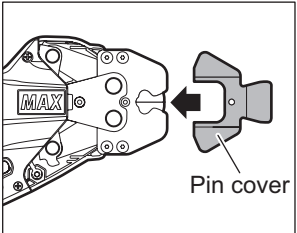


⑩ Tighten the new hex bolt B <2.0 N·m (20 kgf·cm)> included with this product.

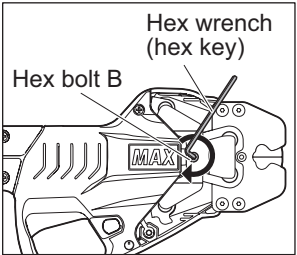

⑪ Attach the cover.

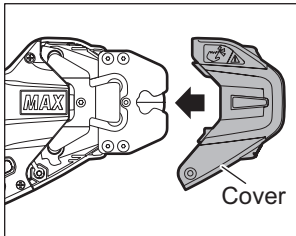

⑫ Tighten hex bolt A <1.25 N·m (12.5 kgf·cm)>.

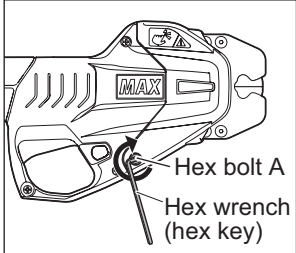

For Europe

www.max-europe.com

For North America

www.maxusacorp.com



MAX EUROPE B.V.
Antennestraat 45,
1322 AH, Almere, The Netherlands
Phone: +31-36-546-9669
FAX: +31-36-536-3985
sales@max-europe.com
www.max-europe.com

MAX USA CORP.
205 Express Street
Plainview, NY 11803, U.S.A.
TEL: 1-800-223-4293
FAX: (516)741-3272
maxcorp@maxusacorp.com
www.maxusacorp.com

