



TC3PR/FL KammBar

Instructions

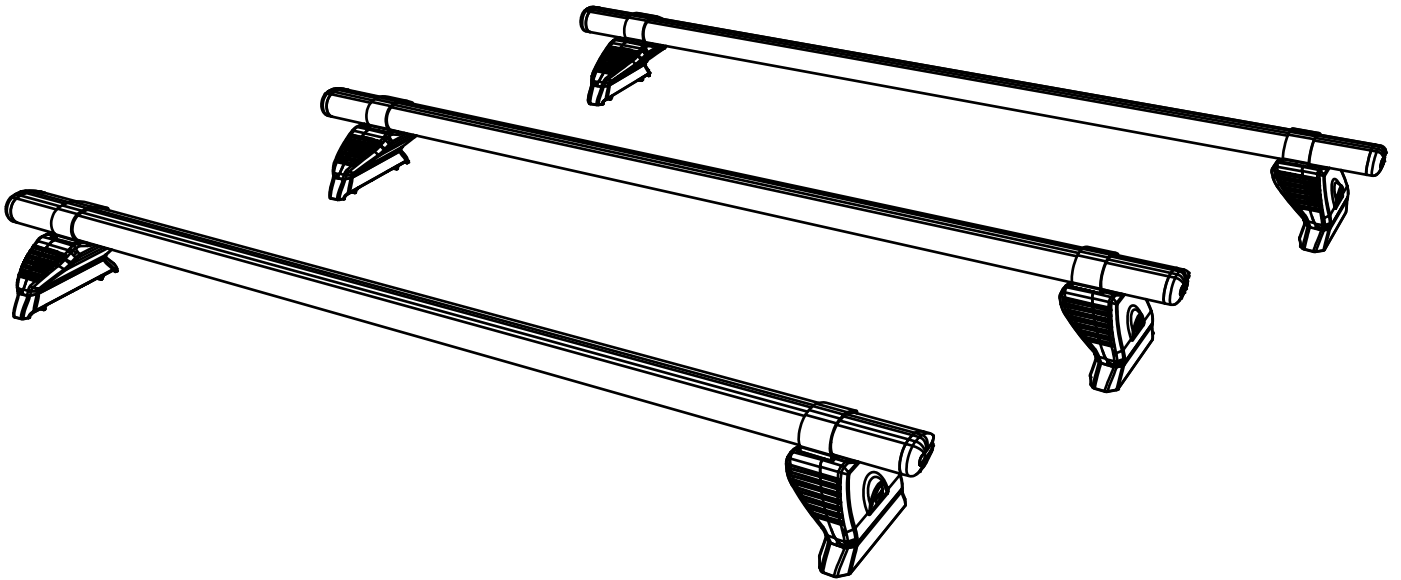


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

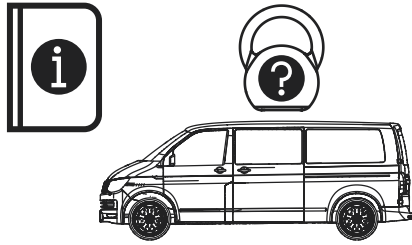


KammBar Pro

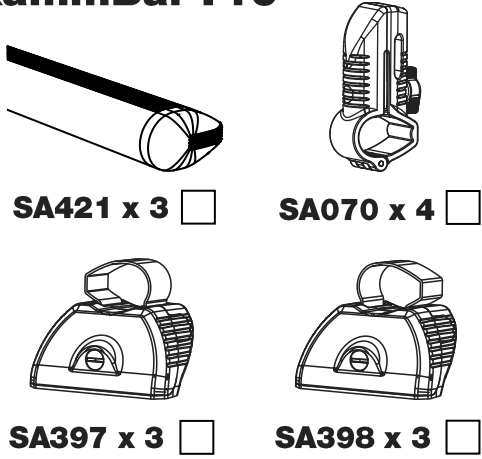

KammBar Fleet

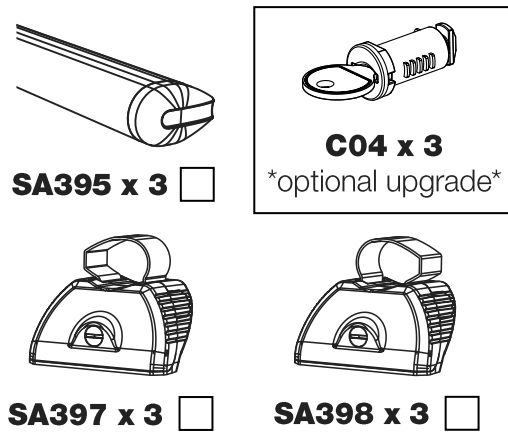


Fitting Kit

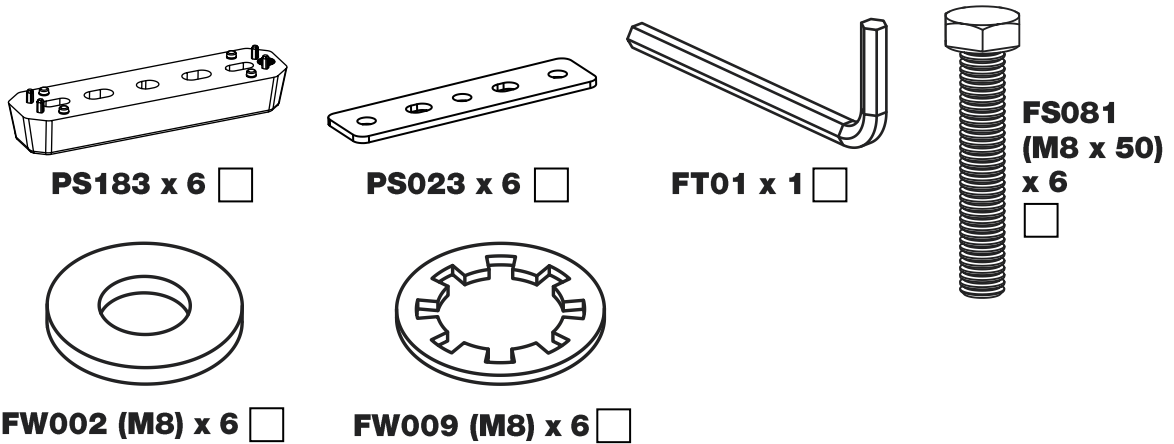


1.




2.

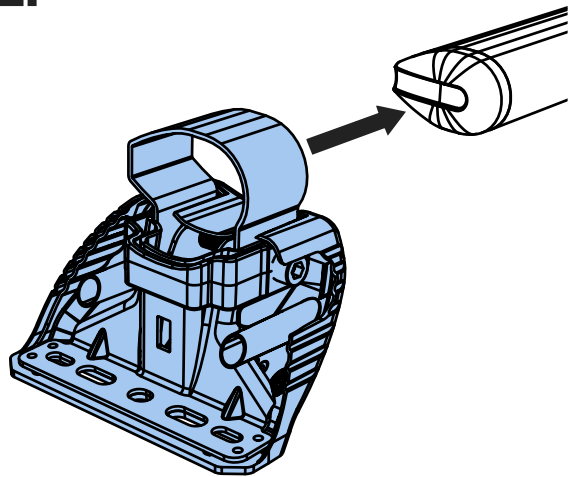


3.




SA397
PS183




SA397
PS183




SA397
PS183

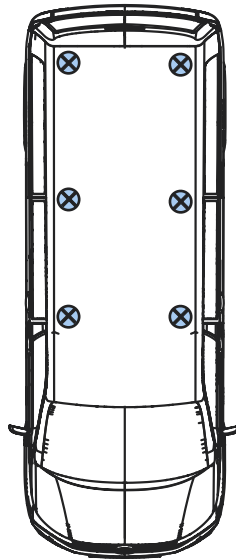


SA398
PS183




SA398
PS183




SA398
PS183




4.

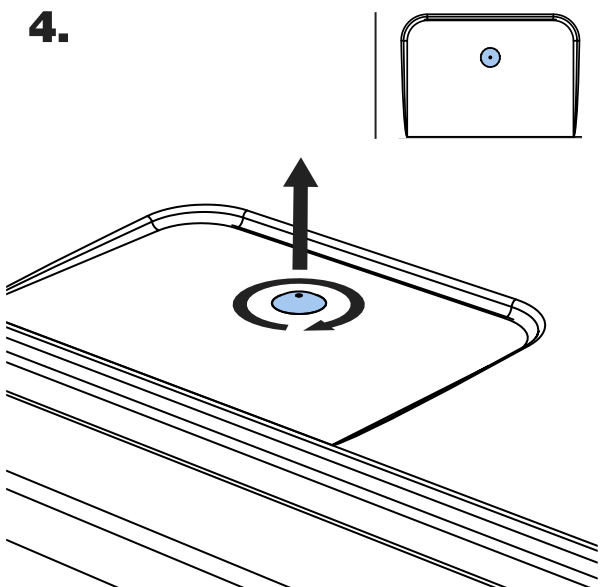



5.

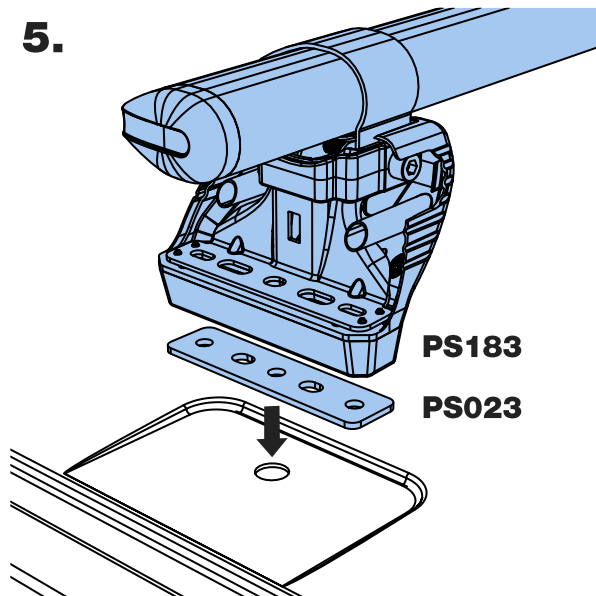

6.

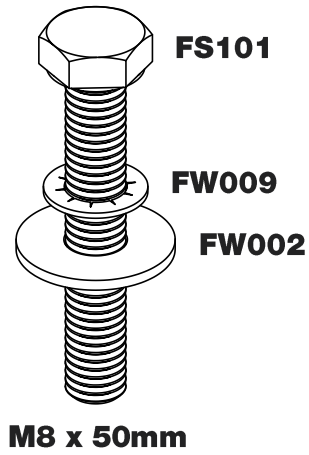


7.

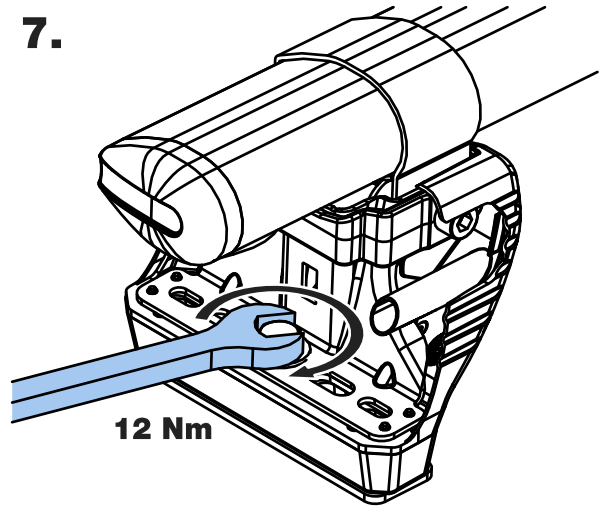


13mm

M8 x 50mm + PS183


8.

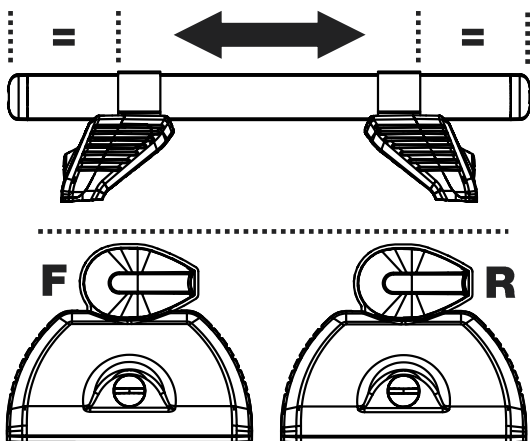

9.

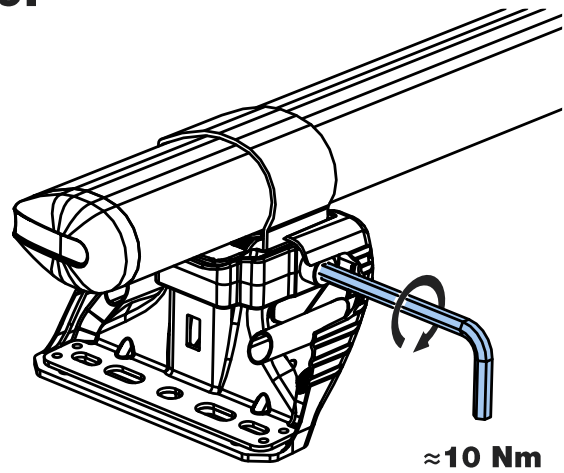

10.

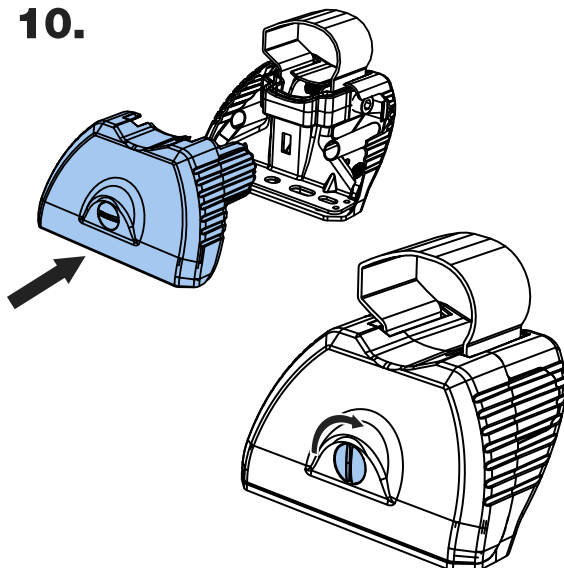

11.

